
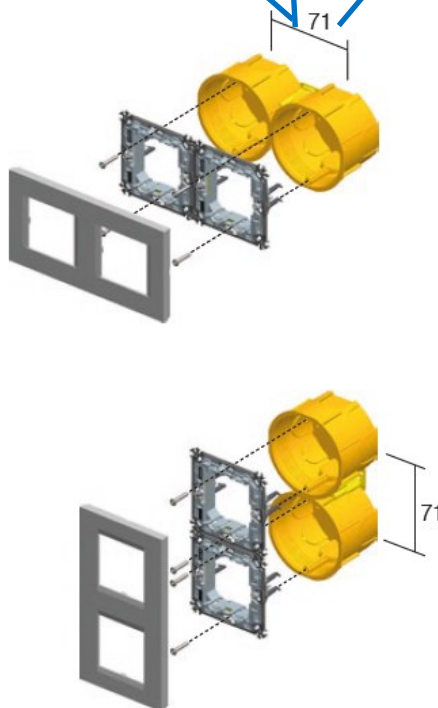


TEM TECHNICAL BULLETIN #7: Spacing for NM25 Frames (1 to 5)

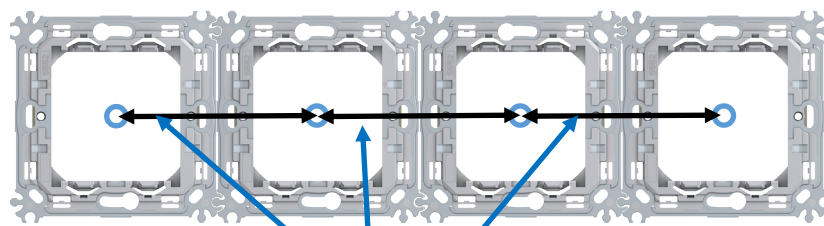

Either start from centre or either end.

Mark Horizontal line, then mark 71mm centres.

Use Hole Saw to accurately cut hole.

Insert Wall Box with Mounting Screws Vertically



Frame mounts over wall box, screws allow alignment if required.

Alignment Screws use these mounts.

